




Sirius Stiletto 2 Scroll Wheel Replacement

This guide will show you how to replace the scroll wheel.

Written By: Benjamin Her

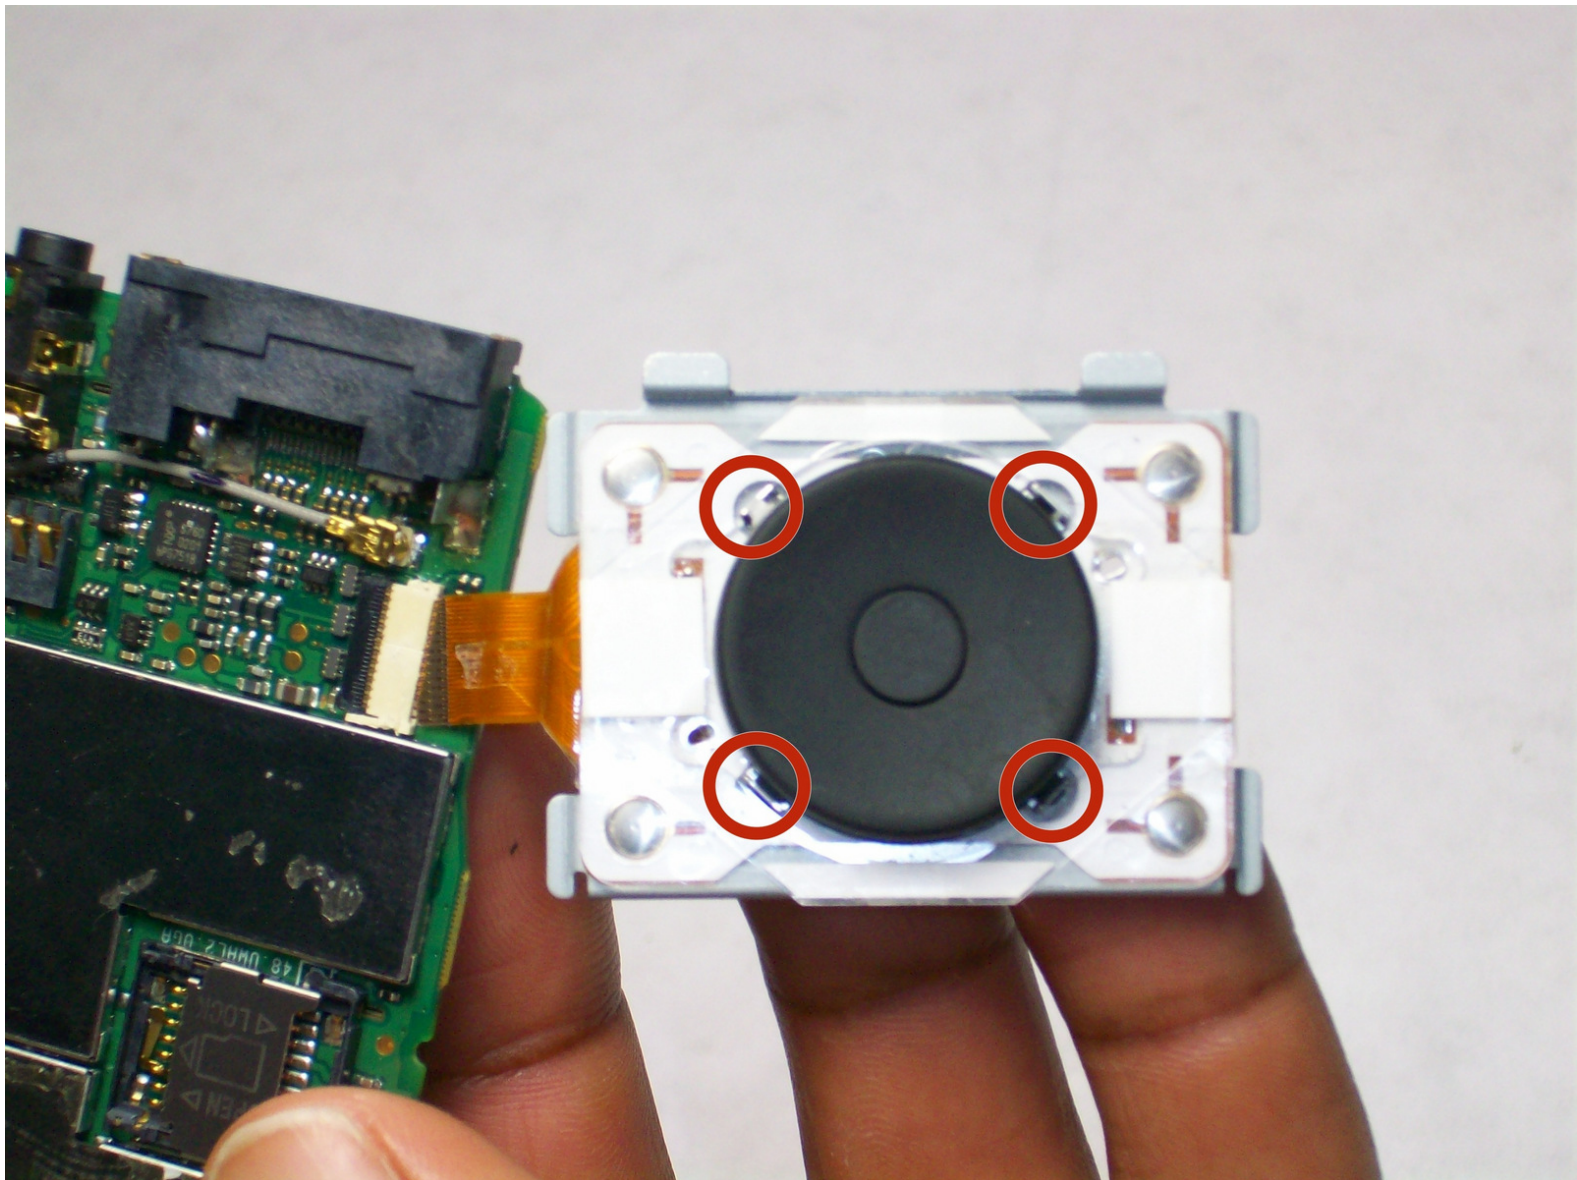

INTRODUCTION

The scroll wheels allows user interact with the device. A scroll wheel that does not work will not allow users to play music or access other features on the device.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery




- From the back of the device, slide the back panel downwards to unlock the panel.
- Lift the panel up, exposing the battery.

Step 2



- Pinch the battery from both sides and lift the battery to remove it.

Step 3 — Front Cover

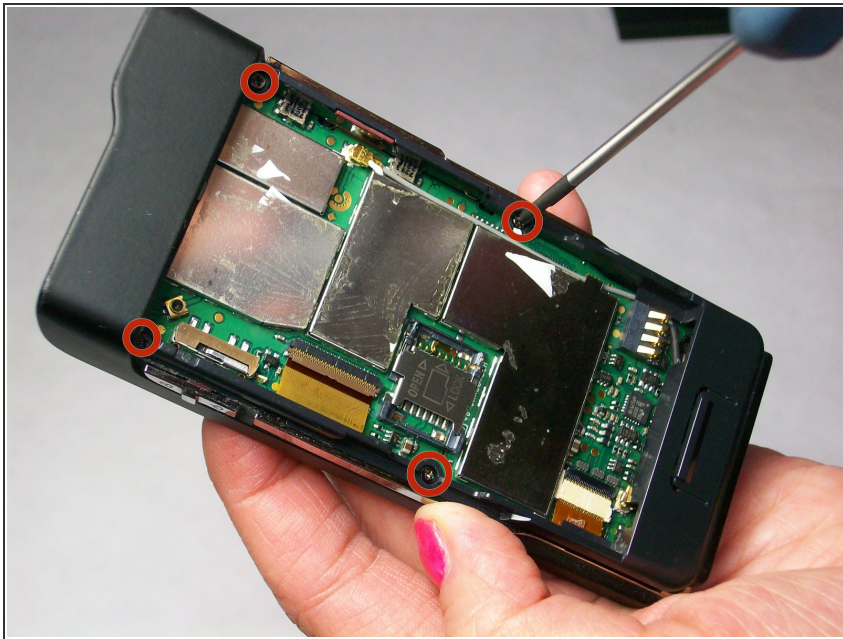



- Unscrew the four 6.68mm (1.43mm diameter) Philips #00 screws.
- ⓘ If needed, remove the sticker to see the screws

Step 4




- Start by using a plastic opening tool to loosen the front cover from the sides.
- Work your way to the bottom of the cover then the top.
- Carefully pry the front cover off.

Step 5 — Scroll Wheel

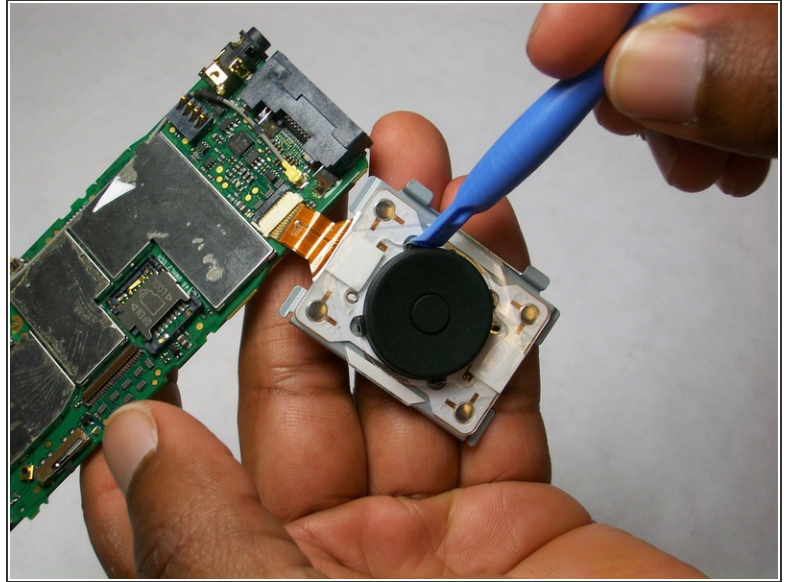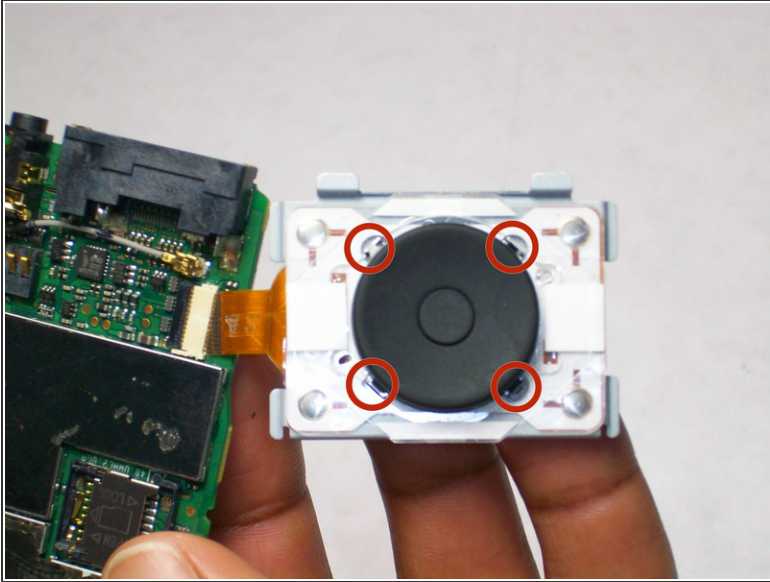

- Isolate the scroll wheel assembly
- Gently pry the four metal tabs outwards, away from the scroll pad.

Step 6

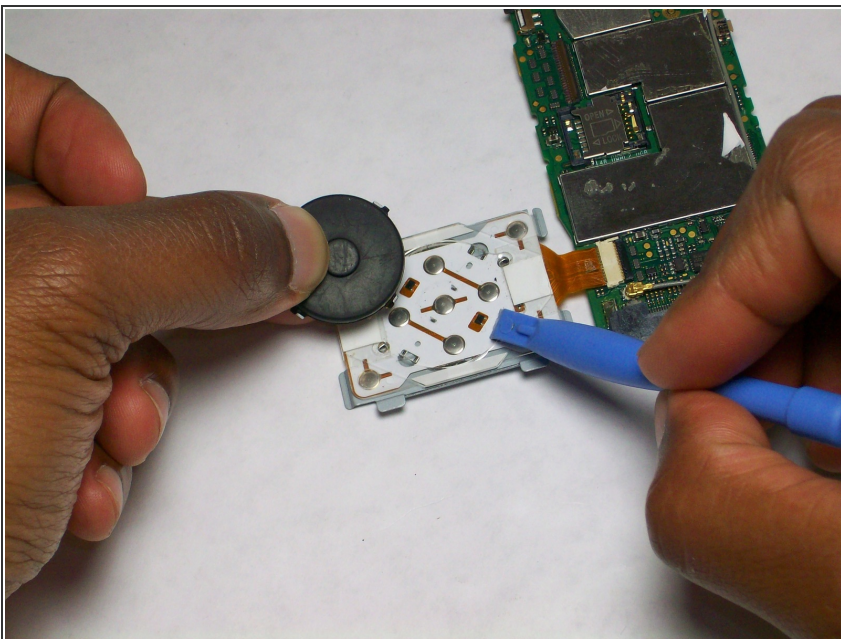

- Once the scroll pad has been released, be careful not to drop the center button. This may damage the spring.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 07:58:01 PM.